






TRIPOD USER'S MANUAL

PF Series tripod kits

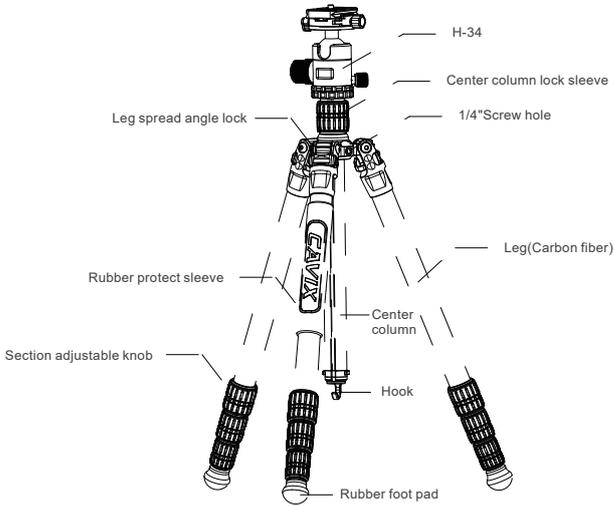

中山精格电子科技有限公司
ZHONGSHAN JINGGE ELECTRONIC TECHNOLOGY CO., LTD.


HEAD

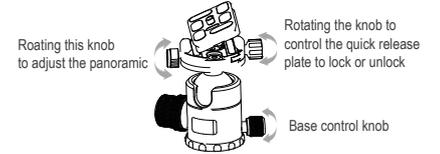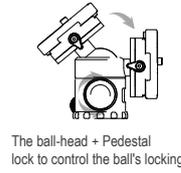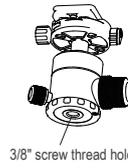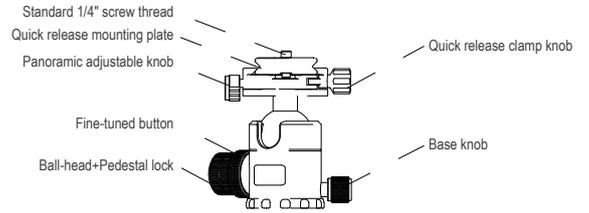

Instruction of Fine-tuned:

- ☆The fine-tuned button to the end anticlockwise.
 - ①To keep the fine-tuned button to the end anticlockwise at first.
 - ②Adjust the pedestal lock and ball to the best
 - ③Back rotating the knob with clockwise
 - ④The ball was the best position after adjusted
- Notice: If the ball was "locking-up", just rotating the button again with anticlockwise to ball moving, it will be ok to re-adjustable the pedestal


LEG ANGLE

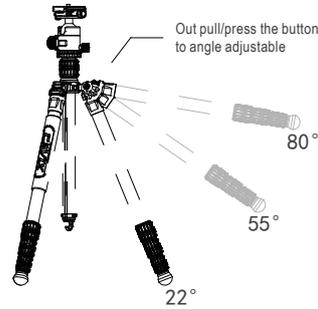

Tripod's angle adjust:

Out pull the adjuster to adjust the leg's angle, there are three stops of leg angle adjustable, e.g. 80 degree, 55 degree, 22 degree. And press the button to lock after angle was adjusted well.


TRIPOD FOLDED

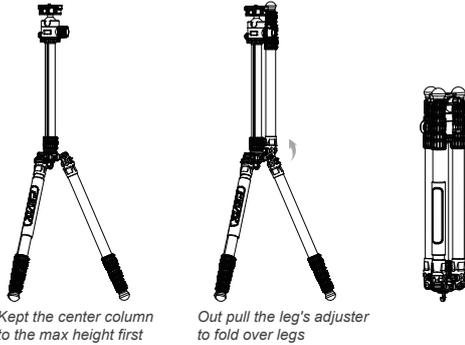


Tripod folded:

Recover all legs after worked, and keep the center column to the max height. Out pull all leg's adjuster to fold over legs to keep tripod in mini height and very good for carrying


TRIPOD CONVERT MONOPOD

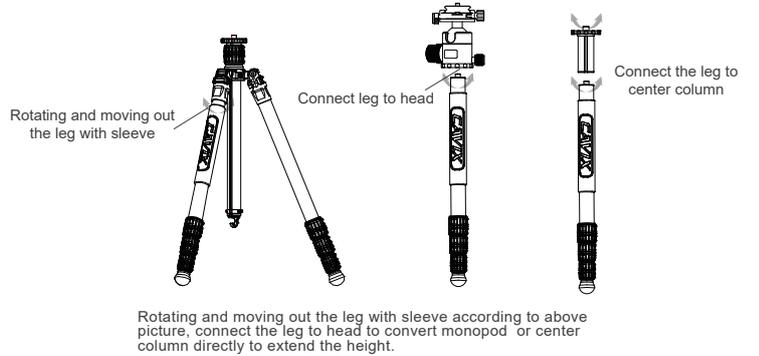


SECTION ADJUSTABLE

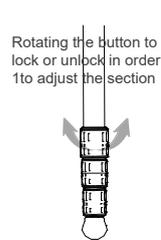

Change foot spike

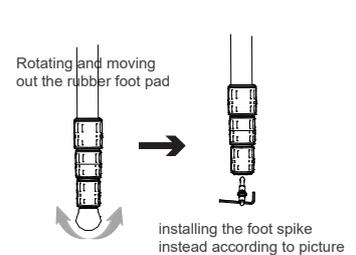

CENTER COLUMN INVERT

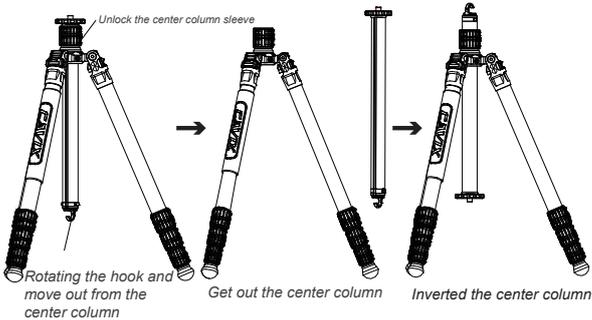

Unlock the center column sleeve, and rotating the hook and move out from the center column. Get out the center column and invert it, input the hook on top (see picture), and lock the center column sleeve.

NOTICE

1. Do not exceed the large capacity of loading
2. Make sure to lock and keep safe when operating the tripod
3. The best working temperature is between Minus 40 degree - 100 degree, do please use it in the temperature range. Do not use the tripod at sea.
4. Do not keep the product under the sunshine for long time
5. To make sure all equipments (like camera) was taken down from the tripod when on transportation
6. After working, do keep it clear of all accessories and tripod before packing
7. Do please use the standard lube (oil) if need
8. Do not connect any power when using