





# TRIPOD USER MANUAL

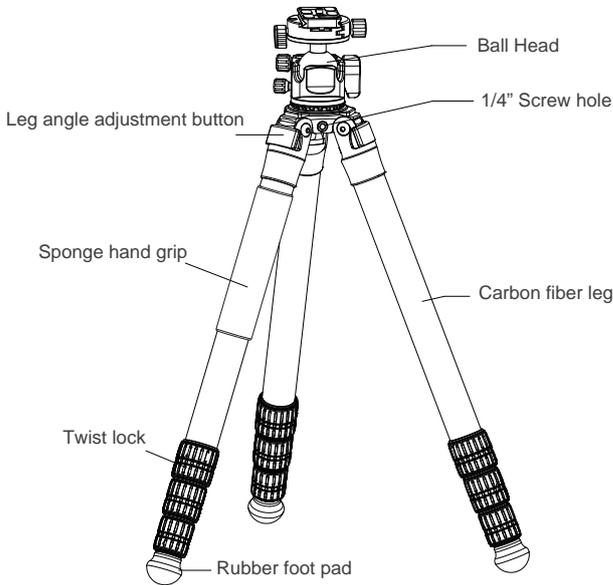

## BALL HEAD

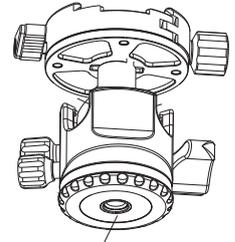


3/8" screw thread hole

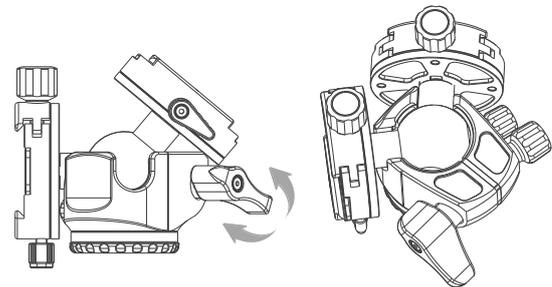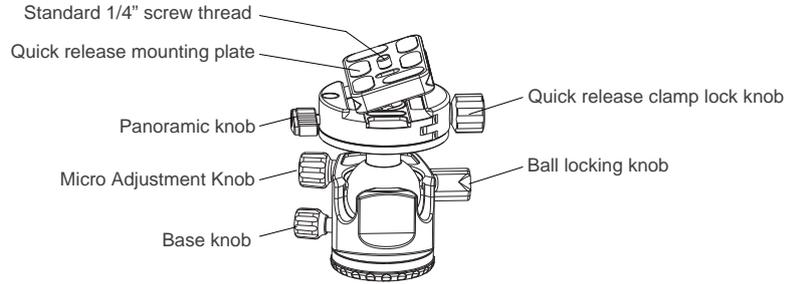


Double-slot design  
The main knob is used to control the locking of the ball

## LEG ANGLE

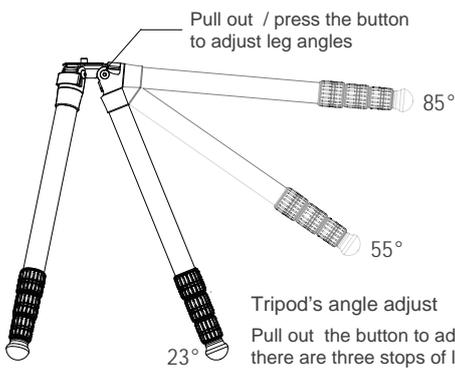


**Tripod's angle adjust**  
Pull out the button to adjust leg angles, there are three stops of leg angle adjustable, e.g. 85 degree, 55 degree, 23 degree. And press the button to lock after angle is adjusted well.

## FOLDABLE TRIPOD

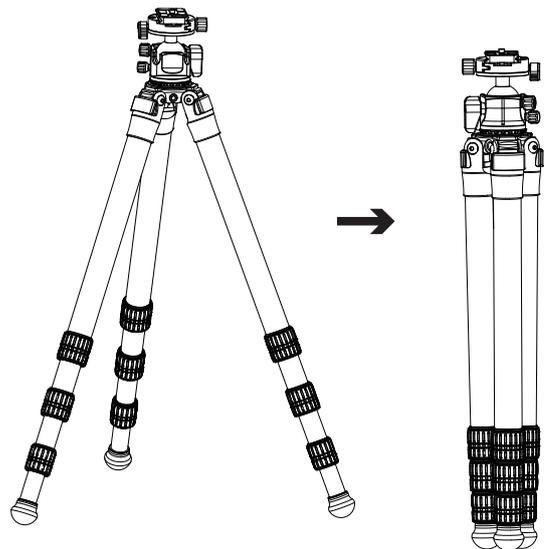

## SECTION ADJUSTABLE

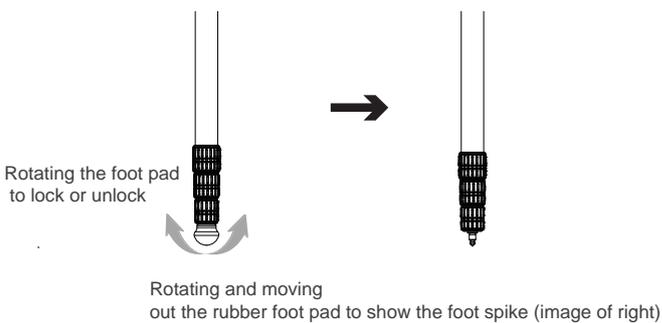

## NOTICE

1. Do not exceed the large capacity of loading
2. Make sure to lock and keep safe when operating the tripod
3. The best working temperature is between minus 40 degrees -100 degree, do please use it in the temperature range. Do not use the tripod at sea.
4. Do not keep the product under the sunshine for long time
5. To make sure all equipments(like camera) was taken down from the tripod when on transportation
6. Keep the tripod and all accessories clean before packing for storage.
7. Do please use the standard lube(oil) if need
8. Do not connect any power when using